


This door is designed for internal use only. It is made from wood and like all timber based materials it can be adversely affected by moisture.

If exposed to water or very high humidity it may discolour and, or, distort.


Once distorted the door will not usually revert when it dries out.

DO NOT hang this door immediately after plastering or other wet trades.

After hanging in new houses or freshly plastered rooms this door should be left half open at all times, to allow air to circulate around it, until the house has completely dried out. The door must not be opened so that the face of the door is near to a freshly plastered wall.

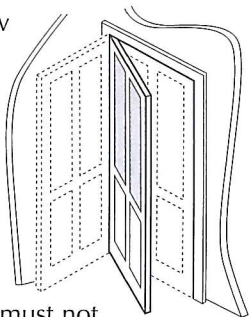

To prevent the risk of exposure to very high humidity ensure that rooms are well ventilated by keeping windows open at all times until the room has dried out.

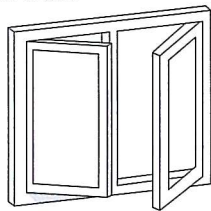

To help seal the door, and reduce the risk of distortion, all surfaces of the primed, or unfinished door, must be painted. The bottom of the door should be painted before hanging.

This door must be installed square, true and plumb and it must be hung in accordance with the manufacturer's instructions or the architect's specification.

If this door is a non fire door and it has to be trimmed to width to fit, equal amounts must be removed from each long edge. Up to 6mm can be removed from each long edge if it is an unlined or moulded door. Up to 5mm can be removed from each long edge if it is a lined or veneered door. If the door has to be trimmed for length equal amounts, up to 6mm, must be removed from the top and bottom.



If this door is a fire door and it has to be trimmed to fit please follow the trimming instructions in the Certifire Installation Guide attached to the edge of the door.

If this is a non fire door and if it weighs more than 20kg, or if it is being hung in an environment subject to large differences of temperature or humidity on each side (i.e. bathrooms or airing cupboards), three hinges must be used.

Pre-finished Doorsets should be considered if the building cannot be fully dried before the door needs to be hung. Pre-finished Doorsets can be installed later in the building schedule and allow more time for the building to dry out. The coating on a pre-finished door set can also help seal the door and reduce the risk of moisture absorption.

# PREMDOR®

## Care of Internal Flush & Moulded Doors

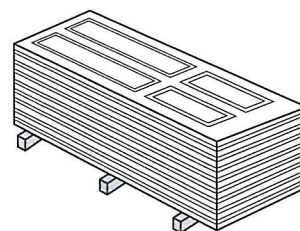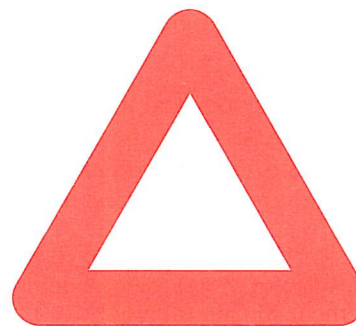

### IMPORTANT NOTE

- ▲ Check door for defects and damage immediately upon receipt.
- ▲ This door must be kept dry at all times.
- ▲ To reduce the risk of colour change, do not store veneered and prefinished doors in direct sunlight.
- ▲ Polythene wrapping should remain on the door until immediately before use.
- ▲ To reduce the risk of distortion this door must be stored flat on 3 level bearers.

### CAUTION - PRODUCT MAY BE HEAVY!

Please take care when lifting or handling this product.

Premdor may disclaim responsibility for any defect or failure subsequently occurring, which is attributable to non-compliance, either wholly, or in part, with the advice given in this information sheet.

Please note: Whilst every effort has been made to ensure the accuracy of advice given, Premdor cannot accept any liability for loss or damage resulting from the use of information supplied in this publication.

For further information please call  
Premdor on **0844 209 000 8**

**Please note: Failure to implement the instructions shown above will invalidate your guarantee. Premdor is not liable for remedial work required as a result of incorrect installation of doors.**